





# IMPALING CLIP MOUNTING DETAILS

## Acoustical Wall Panels


**1. Layout the panel location.**

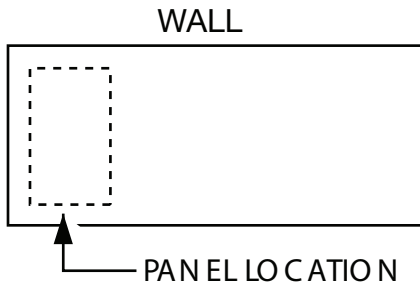

**2. Secure impaling clip to wall using two screws per clip. Toggle anchors may be needed on concrete walls.**

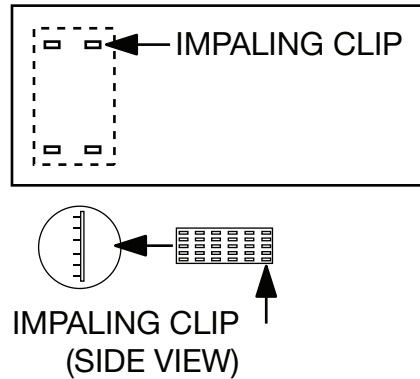


**3. Apply a generous amount of liquid nails or construction adhesive to clip.**

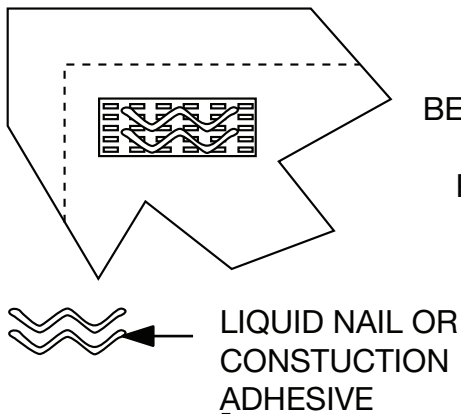


**4. Apply additional adhesive to back of panel in a random pattern.**

BEST TO PLACE A SMALL BEAD OF ADHESIVE ON FABRIC AND PRESS TO WALL FOR PERMENTANT INSTALLATION.

LIQUID NAIL OR CONSTRUCTION ADHESIVE

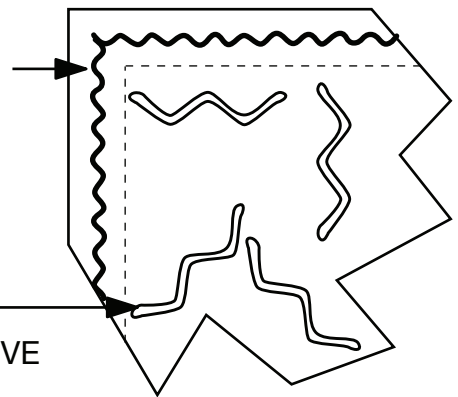

**5. Press panel firmly to wall. Make sure that the fiberglass core is being impaled and not the fabric.**

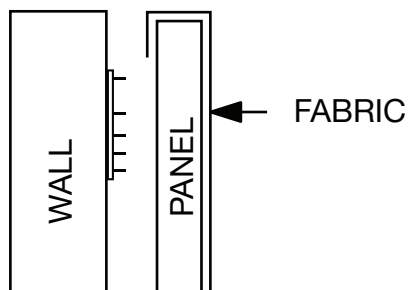

**6. Clean up with soapy warm water if needed.**

